


SF-2100/SF-2150 & SF-2200/SF-2250 Faucets

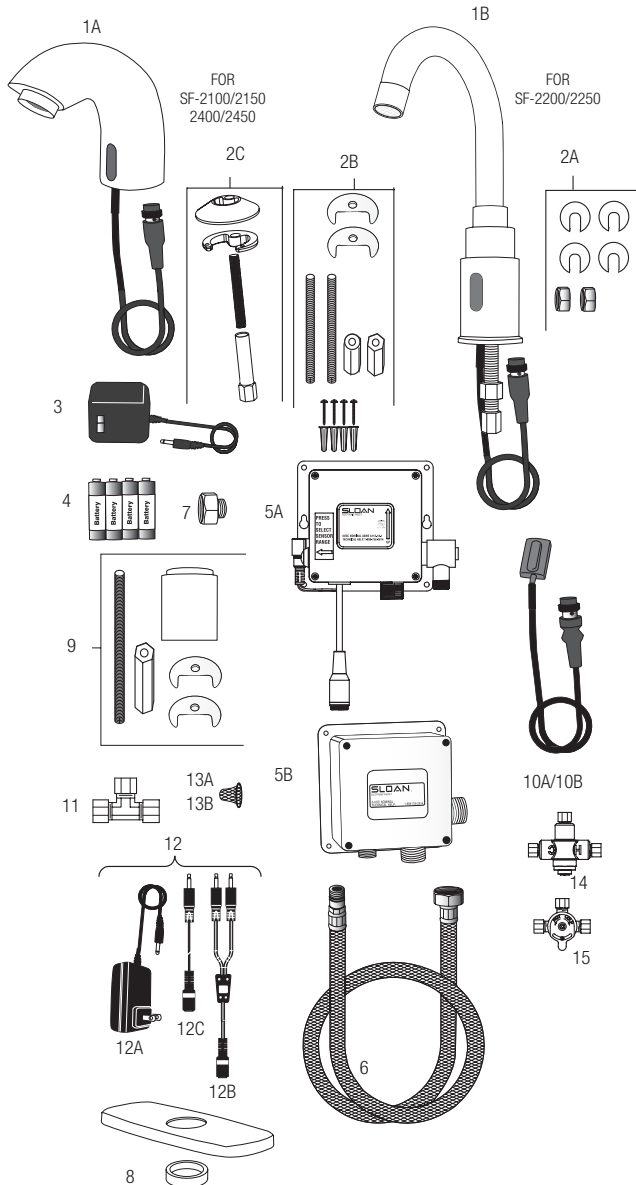

PARTS LIST—SF-2100/SF-2150/SF-2200/SF-2250

| Item No. | Code No. | Part No. | Description |
|----------|----------------|-----------|--|
| 1A. | — | — | Pedestal Faucet Assembly w/Outlet (Models SF-2100 and SF-2150) |
| 1B. | — | — | Gooseneck Faucet Assembly w/Outlet (Models SF-2200 and SF-2250) |
| | 0362005 | SFP-5 | Mounting Hardware Kit, Screws and Anchors for Control Module (all models) |
| 2A. | — | SFP-1004 | Mounting Hardware Kit, Pedestal Faucet (Models SF-2200/SF-2250) |
| 2B. | 0362004 | SFP-4 | Mounting Hardware Kit, Pedestal Faucet (Models SF-2100/SF-2150) (Pre 3/2010) |
| 2C. | | SFP-44 | Mounting Hardware Kit for SF-2100/2150 (Post 3/2010) |
| 3. | 0362006 | SFP-6 | 110 VAC/6 VDC Plug-In Adapter (US) (Models SF-2100 and SF-2200) |
| 4. | — | — | Batteries, 4 AA-size (all models) |
| 5A. | 0362040 | SFP-40-A | Control module w/ adjustable button (6 pin connector) |
| 5B. | 0362008 | SFP-8 | Control module (Prior 8/2008-4 pin connector)* |
| 6. | 0362010 | SFP-10 | Flex Hose, Control Module to Spout (all models) |
| 7. | 0362045 | SFP-45-A | Inlet adapter – 1/2" NPSM to 3/8" compression connection (not supplied with most international models) |
| 8. | 0362011 | SFP-11 | 4" Trim Plate with Spacer (all models) |
| 9. | 0362030 | SFP-30A | Faucet Extension Kit (Models SF-2100/2150) |
| 10A. | 0362041 | SFP-41-A | Sensor Assembly (6 pin connector) |
| 10B. | 0362034 | SFP-34 | Sensor Assembly (Prior 8/2008-4 pin connector)* |
| 11. | 3365461 | ETF-617-A | 3/8" Bak-Chek® Tee Compression Fitting |

* IMPORTANT: Sloan added the range adjustment feature in August 2008 for faucets made prior to August 2008 use the following replacement parts: SFP-34 and SFP-8

NOT SHOWN SEPARATELY

| | | | |
|---|----------------|----------|--|
| — | 0335029 | EAJ-51 | 0.35 gpm (1.3 Lpm) spray head (Models SF-2100/2150) |
| — | 0335012 | EAJ-15 | 0.5 gpm (1.9 Lpm) vandal resistant spray head (Models SF-2100/2150) |
| — | 3362000 | SFP-1000 | 0.35 gpm (1.3 Lpm) vandal resistant spray head (Models SF-2100/2150) |
| — | 0362012 | SFP-12 | Gooseneck Spout w/Outlet (Models SF-2200/2250) |
| — | 0362013 | SFP-13 | 0.5 gpm (1.9 Lpm) spray head (Models SF-2100/2150) |
| — | 0362014 | SFP-14 | Spray head for Gooseneck Faucet (Models SF-2200/2250) |
| — | 0362023 | SFP-23 | 2.2 gpm (8.3 Lpm) Aerator (Models SF-2100/2150) |
| — | 0362024 | SFP-24 | 2.2 gpm (8.3 Lpm) vandal resistant aerator (Models: SF-2100/2150) |
| — | 0362020 | SFP-26 | 220 VAC/6 VDC Plug-In Adapter (ASIA) |
| — | 0362025 | SFP-25 | 220 VAC/6 VDC Plug-In Adapter (EURO) |
| — | 0362026 | SFP-20 | 220 VAC/6 VDC Plug-In Adapter (UK) |
| — | 3362022 | SFP-22-A | 8" Trim Plate |

ACCESSORIES

| | | | |
|------|----------------|----------|---|
| 12. | 0362035 | SFP-35-A | 100-240 VAC/6 VDC Gang Adapter Kit, includes 12A, 12B and 12C |
| 12A. | 0362016 | SFP-36-A | 100-240 VAC/6 VDC Plug-In Adapter |
| 12B. | 0362018 | SFP-38 | Cable Splitter, 51" (1300 mm) – 5 included in kit |
| 12C. | 0362017 | SFP-37 | Cable Extension, 51" (1300 mm) |

REPAIR PARTS

| | | | |
|------|----------------|------------|--|
| 13A. | 0362015 | SFP-15 | Strainer For SFP8 and SFP40A modules with straight inlet (Prior to year 2011). |
| 13B. | 3315028 | EBF-1004-A | Strainer For SFP40A modules with right angle inlet. (Year 2011 to present). |
| 14. | 0362045 | MIX-135-A | Below Deck Thermostatic Mixing Valve |
| 15. | 3326009 | MIX-60-A | Below Deck Mechanical Valve Mixing Valve |

— in Item No. column = Not shown in illustration

— in Code No. and Part No. column = Not sold separately

SF-2100/SF-2150 & SF-2200/SF-2250 Faucets

TROUBLESHOOTING GUIDE

1. Faucet delivers water in an uncontrolled manner.

A. Faucet is not working properly. Contact Sloan Technical Support.

2. Faucet DOES NOT deliver any water when sensor is activated.

INDICATOR: Solenoid valve produces an audible “CLICK.”

A. Water supply stop(s) closed. Open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

INDICATOR: Solenoid valve DOES NOT produce an audible “CLICK.”

A. Batteries low (battery powered models). Replace batteries.

B. Power failure (adapter powered models). Check power supply.

3. Faucet delivers only a slow flow or dribble when sensor is activated.

A. Water supply stop(s) are partially closed. Completely open water supply stop(s).

B. Water strainer in control module is clogged. Close supply stops and remove water inlet line at control module. Remove, clean and reinstall strainer and water inlet line. Replace strainer if required.

C. Aerator is clogged. Remove, clean, and reinstall aerator. Replace aerator if required.

D. Faucet is not working properly. Contact Sloan Technical Support.

4. Faucet DOES NOT stop delivering water or continues to drip after user is no longer detected.

A. Faucet is not working properly. Contact Sloan Technical Support.

5. The water temperature is too hot or too cold on a Faucet connected to hot and cold supply lines.

A. Supply stops are not adjusted properly. Adjust supply stops.

CARE AND CLEANING

DO NOT USE abrasive or chemical cleaners (including chlorine bleach) to clean faucet that may dull the luster and attack the chrome or special decorative finishes. Use **ONLY** mild soap and water, then wipe dry with clean cloth or towel. While cleaning the bathroom tile, protect the faucet from any splattering of cleaner. Acids and cleaning fluids will discolor or remove chrome plating.

When assistance is required, please contact Sloan Technical Support at: 1-888-SLOAN-14 (1-888-756-2614).